


PVC Airlock Parts and Assembly

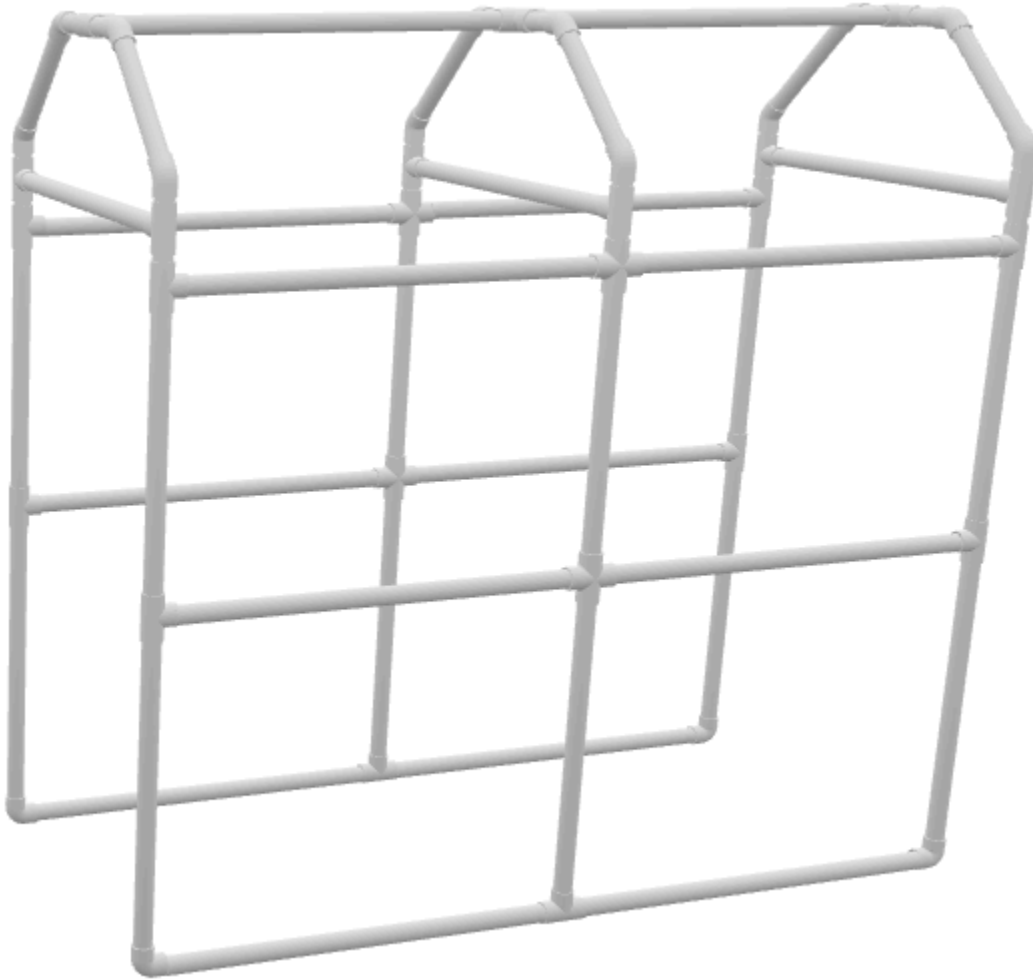

Ameri-Brand Products Inc.




800-982-6966

www.websweeper.com


1-1/2" PVC Cut Sheet




14 pieces at 44-1/4"

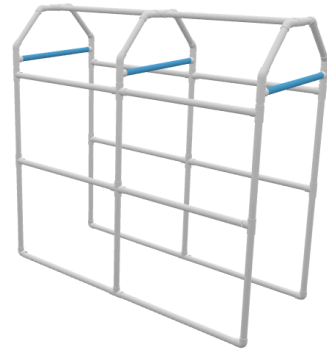


3 Pieces at 38-3/4"

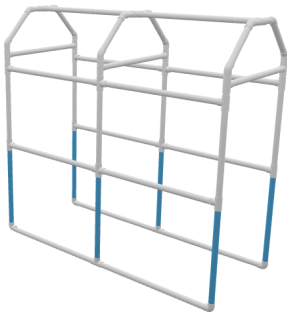


6 Pieces at 34-1/2"

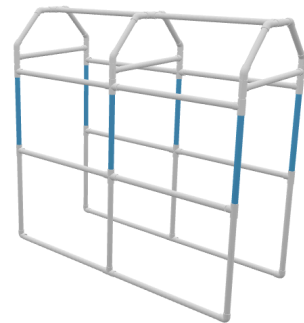


6 Pieces at 29"

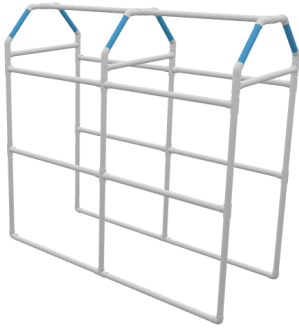

6 Pieces at 16"

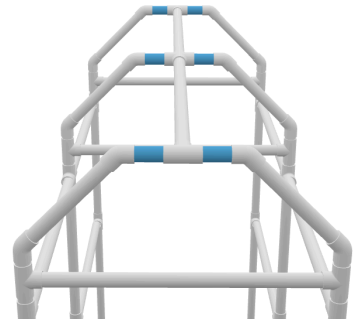


6 Pieces at 6-³/₄"

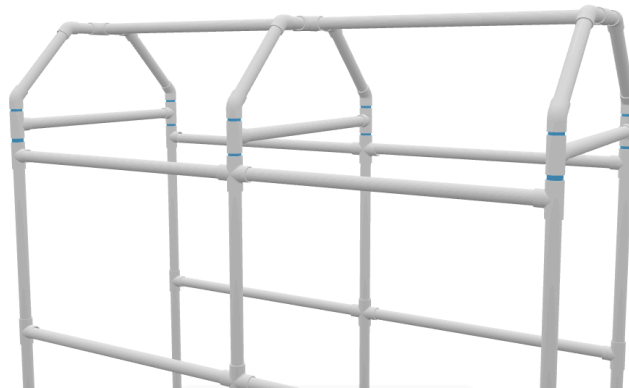


12 Pieces at 3"
(Couplings / Joiners)

PVC Fitting Locations and Quantities

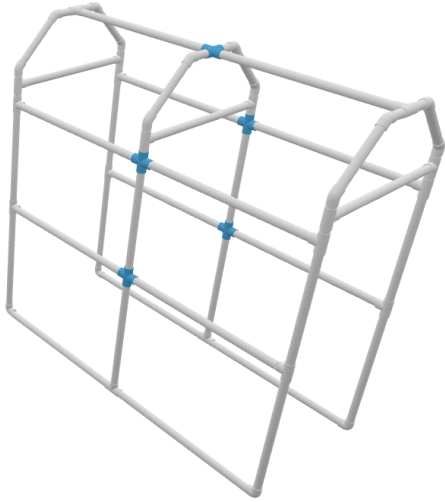


**4-Way PVC Fitting
(Quantity 5)**

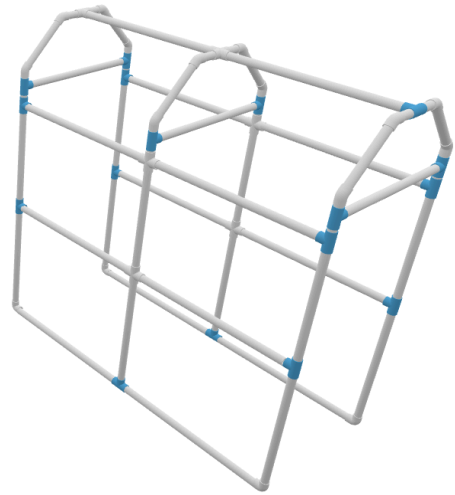

**3-Way "T" Fitting
(Quantity 18)**



**90 Degree Elbow Fittings
(Quantity 4)**

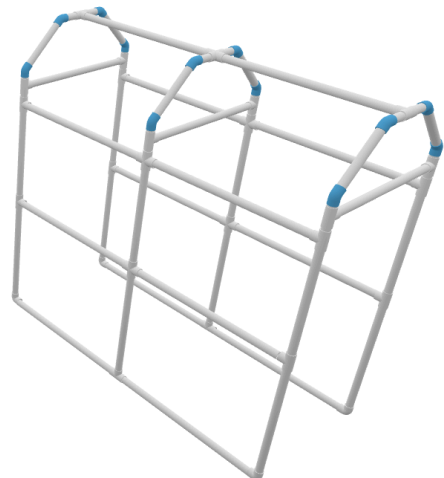

**45 Degree Elbow Fittings
(Quantity 12)**

Final Assembly Parts:



Parts:

- **4' x 8' x 1" Plywood (Base)**
- **2" Conduit Straps (Quantity 6)**
- **Indoor/Outdoor Carpet (Plywood Cover)**

Attaching the Skin Cover and Zipper Panels



**Attach Airlock Skin to frame using provided
zip screws.**

Attaching the Dome to the Airlock



- **Locate the center of the dome shroud by folding it in half. Mark this location with a pen or marker.**
- **Using the provided black rubber strips, attach the shroud of the dome to the center bow of the airlock chamber starting at the center of the top and working down the sides.**